

Minidisc changer system

operating instructions

Thank you for your purchase.



Failure to follow safety precautions for electrical products can result in fire or personal injury.

This instruction manual and "Installation and Connection" provide important precautions and how to handle the product to prevent accidents. **Please read this instruction manual and "Installation and Connection" carefully** to use the product safely. After reading it, be sure to keep it in a place where you can see it at any time.



MDLP

MDX-66XLPRF



For your safety

Sony products are designed with due consideration for safety. However, if all electrical products are used improperly, they may cause personal injury due to fire or electric shock, which is dangerous. Be sure to observe the following to prevent accidents.



Observe safety precautions

Please read this instruction manual and the precautions in the separate "Installation and Connection" carefully.

Drive safely according to the Road Traffic Act

The driver is obliged to comply with the Road Traffic Act. Acts that violate safe driving, such as paying attention to the front, are illegal and may cause an accident or injury. • The driver does not operate while driving. • Listen at a volume that allows you to hear the sound outside the vehicle.

Check regularly

Once a year, check that the power cord is not damaged, that the wiring is not disconnected due to vibration, and that the connection part is not in contact with the vehicle body.

Do not use if it breaks down

If you notice any malfunction or damage to the cabinet or power cord, contact the store where you purchased the product or a Sony service representative for repair immediately.

Should something go wrong

If you hear strange sounds or smells, or if smoke comes out



1 Park your car in a safe place

2 Turn off the power 3 To

the store where you purchased the product

Or Sony Sir

Ask the screw

counter for repair

Meaning of warning display

The following display is displayed on the product in the instruction manual and the separate "Installation and Connection". Please read the text after fully understanding the contents of the display.



Failure to follow the precautions on this label may result in death or serious injury due to fire or electric shock.



Failure to follow the precautions on this label may result in injury or damage to your vehicle due to electric shock or other accidents.

Attention symbol



火灾



感電

Symbol prohibiting acts



禁止



分解禁止

 **警告**Four
 **注意**Five
Precautions for use 6

Preparation First, reset the unit 10 Prepare
the remote controller 11
MD 12 Name of each
part 14

You can use it even if you read only here

Listen to MD 16
Select a disc 18
Cue the song 19
Find the place you want to hear 19
How to read the display 20
Listen repeatedly
(repeat performance) 21
Listen in different song order
(Shuffle performance) 21

Setting

Set the transmission frequency
22 Set the output level twenty three

Appendix Is it a

malfunction?
24 Warranty and after-sales service 25
Main specifications 26 Index



Failure to observe the following precautions may result in death or serious injury due to fire and electric shock .

Ask the store where you purchased the product to install it.

Expertise is required to install this machine.

If you install it yourself, follow the instructions in the separate "Installation and Connection" section to install it correctly. If it is not installed correctly, it may cause a fire or electric shock.




Do not drop water or foreign matter inside

Water or foreign matter may cause a fire or electric shock. If water or foreign matter gets in, turn off the power immediately and contact the store where you purchased the product or a Sony service center.



禁止

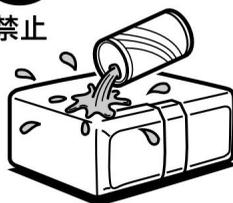


Use a fuse with the specified capacity

When replacing the fuse, be sure to use the fuse case of the power cord or the one with the specified capacity amperage indicated on the main unit. Using a fuse that exceeds the specified capacity may cause a fire.



禁止

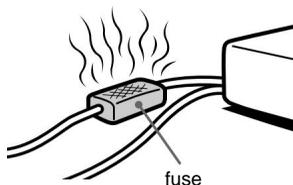

Do not install the display or monitor in a place that obstructs the front view.

Obstructing your front view can cause an accident or injury. Also, make sure that the mounting location does not interfere with the operation of the passenger airbag system.



禁止



Do not disassemble or modify

It may cause fire, electric shock, or accident.

For internal inspections and repairs, contact the store where you purchased the product or a Sony service representative.



分解禁止



Failure to observe the following precautions may result in injury or damage to the car.

Do not put your hand in the disc insertion slot

Your hands may get caught inside and cause injury.



禁止



Safety precautions regarding batteries

Be sure to observe the following to avoid liquid leakage, heat generation, ignition, explosion, etc.



- Do not put in fire. Do not short-circuit, disassemble or heat.
- Use the specified type of battery.



- Enter the correct + and-directions.
 - Remove the battery when it is used up or when it will not be used for a long time. •
- Do not mix new and used batteries or different types of batteries.

If the battery leaks, wipe off the battery compartment and then insert a new battery. Should the liquid get on your body, wash it off thoroughly with water.

Precautions for use

To avoid damaging the surface of the display

To

Insecticide and hairspray on the display surface

Chemicals such as insect repellent, rubber, and vinyl


Avoid contact with Neil products for long periods of time.

The surface of the main body may be altered or deformed, or the paint may peel off.

About fuses

When replacing a fuse, be sure to use a fuse with the specified capacity (amperage) indicated on the fuse case.

Substituting a fuse or wire with a capacity larger than the specified capacity not only causes a malfunction but is also extremely dangerous.

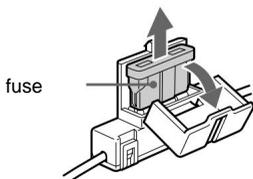

About liquid crystal display

The display may be difficult to see at extremely high or low temperatures, but this is not a malfunction. When the ambient temperature returns to normal temperature, the display returns to normal.

Handling of MD

The MD itself is stored in a cartridge,

Easy to handle without worrying about dust and fingerprints

It has become. However, it's a cartridge

Dirt or warp may cause malfunction.

There is also. Enjoy with beautiful sounds forever

Please note the following:

Do not touch the inside of MD directly

Do not open the shutter by

hand. unreasonableness

It breaks when you open it

vinegar.

If the shutter opens when

you remove it from the

machine, close it immediately.

please.



About the place to put

Where it is exposed to direct sunlight

Where the temperature is high, such as

In places with high humidity

Please do not place.

Especially in summer, in direct sunlight

Of the car with the windows closed

Sheet, dash bow

The temperature on the top of the door becomes quite high, so

Please do not leave it.



To hear with good sound

Cup holder in the car

When you use

Sudden vibration, etc.

Juice etc. are spilled

Is it MD software?

Please be careful not to get caught

Please be careful. Until then

The late when playing MD

It may cause trouble.



Precautions when attaching labels

The label is correctly affixed to the cartridge

 
Without it, the MD cannot be taken out of the changer

May become.

- Paste it in the designated place.



- Do not stack them.



- If the label is flipped or floating, replace it with a new label.



Regular care

Dust and dirt on the surface of the cartridge

Wipe off with a dry cloth.



Precautions for use (continued)

About condensation

MD pu, such as immediately after turning on the heater when it is cold

Dew (water droplets) on the lens of the optical system inside the layer

May occur. Such a phenomenon

It is called condensation. If the condensation remains, Leh

MD play because it cannot be read by the

Yar may not work.

Take out the MD, depending on the surrounding conditions

If left unattended, condensation will be removed in about 1 hour.

It will be removed and it will work normally. and

And if it doesn't work properly after hours

Please request after-sales service

simach

About dew condensation on the display window

Dew will form inside the display window when
you bring it from a cold place to a warm place.

You may.

In such a case, leave it for a while

Condensation is removed and it returns to normal.


Card remote control

How to insert the battery

Insert 3 and # of lithium battery CR2025 correctly please.



X X

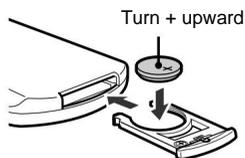

Battery replacement time

When the battery is exhausted, you can also operate it by pressing a button. It may not be. Approximately 6 in normal usage. It lasts for months (it may be shorter depending on how it is used) increase). The card remote control doesn't work at all. If not, replace the battery and check the operation. when.

Safety precautions regarding batteries

To avoid liquid leakage, heat generation, ignition, rupture, etc. Please be sure to observe the following.



- Do not put in fire. Short or minutes Solution, do not heat.
- Do not charge the battery.
- Use the specified type of battery.



- Enter the correct + and-directions.
- Do not use for a long time when the battery is used up. When that happens, take it out.

If the battery fluid leaks, the battery compartment fluid. Wipe off well, then insert new batteries please. Should the liquid get on your body, Rinse thoroughly with water.

Precautions about card remote control

- On the dashboard, on the steering wheel, etc. Do not attach or leave the card remote controller in direct sunlight. The heat may deform the card remote controller. (Please note that the temperature can be quite high, especially on the dashboard exposed to direct sunlight in the summer.)
- When parking in direct sunlight. Remove the card remote controller from the installation location and store it in a glove box or other place out of direct sunlight.
- In direct sunlight, it may be difficult to receive the signal from the card remote controller. In such a case, move the card remote control closer to the remote control light receiving part of the display.


Introduction

Converts the sound of the MD changer into an FM signal, sends it, and receives it with the FM tuner.
You can listen to it.

Main features

- Long-time playback (MDLP) function.
- Direct-in method that makes it easier to put in and take out MDs.
- Compact size for space such as in glove box or console box
- Can be installed effectively.
- When the ignition key of the car is ON, the inside lights up, improving operability at night.
- 1bit D / A converter improves sound quality.
- Comes with a wired remote control and a card remote control for comfortable operation.

First, reset the unit

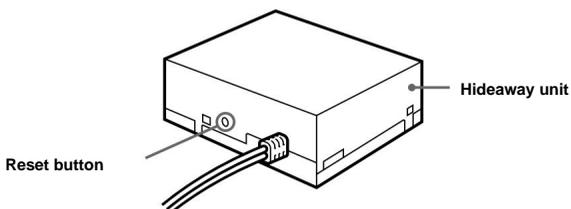


When using for the first time or replacing the battery of the car, press the reset button of the hideaway unit with the tip of a toothpick.

please note

- Pressing hard with something like a needle may cause a malfunction.
- When you press the reset button, some settings such as the transmission frequency (page 22) disappear.

Please set it again.

Prepare the remote control

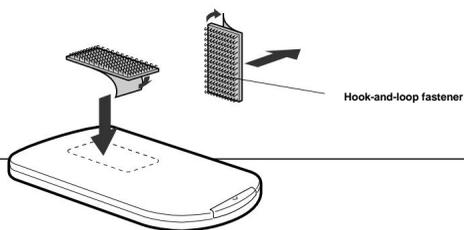

Install in the car

Attach the attached hook-and-loop fastener to the back side and attach it in a place that is easy to operate.

please note

- Before installing, operate the unit with the card remote controller from the place where you want to install it.

Please check if you can.

- Wipe the surface of the mounting location clean before applying.
- Cards in direct sunlight, such as on the dashboard or on the steering wheel

Do not attach or leave the mocon. Card remote control by heat


May be deformed. When parking your car in direct sunlight

Places where the card remote control is removed and the glove box is not exposed to direct sunlight


Please keep it in a place.

Insert MD

1 Open the door until you hear a click.

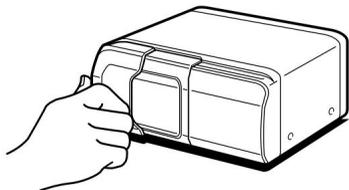

C

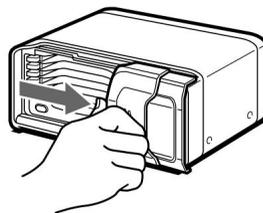


When the ignition key of the car is ON, the inside lights up (when the ignition key is OFF, it lights up for about 1 minute when the door opens).

Precautions when opening and closing the door

Do not push hard on the transparent part of the door. It may cause damage or injury.

Do not put your hands inside the changer as it may cause injury.

2 Insert the MD until you hear a click.

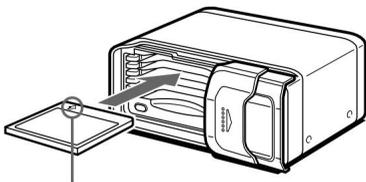


please note

Make sure the MD shutter is closed.
Please put it in after that.

Put the label side up in the direction of the arrow

3 Close the door until you hear a click.

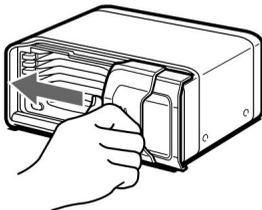

Note

When the MD is inserted and the door is closed or reset, the unit automatically operates and reads the MD information. All in this machine It will stop after reading the MD information. At that time, the inside blinks, but it is not a malfunction.


Hmm.

Be sure to close the door. If dust or dirt gets in,

the lens of the internal optical system will get dirty and cause sound skipping. Also, if a foreign object gets inside, it may cause a malfunction.

Press the EJECT button to eject the MD

EJECT button

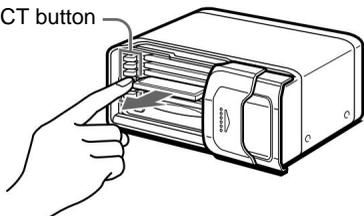

MDs that are not playing can be taken out at any time


You can

Notes

- When removing two or more MDs, remove them one by one from the upper disc. when.
- Do not press the EJECT button when the MD is playing or reading and is not in the eject position .

Press the STOP button to eject the MD in the playback position.

STOP button

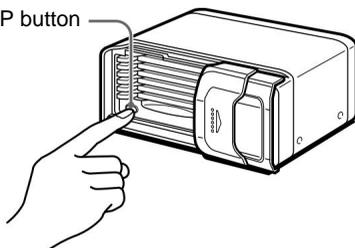

The MD returns to the eject position.

Then press the EJECT button and take the MD.


I will start.

MD during playback and MD at the playback position

Can be retrieved this way.

Name of each part

Display (RM-X85RF) • There is a detailed explanation on the page inside.

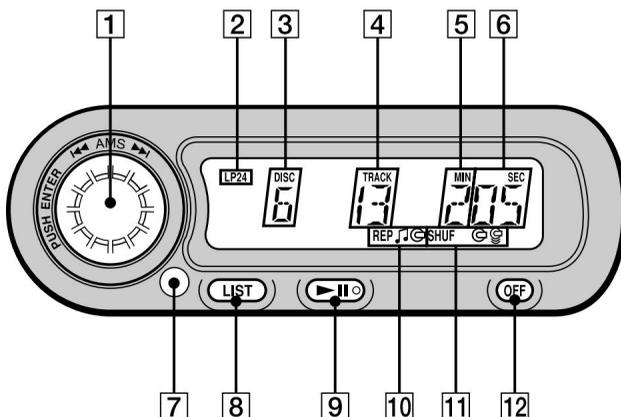

AMS Enter
1 AMS / ENTER (Cue / Select / Enter / Frequency setting / Output level setting) Dial qk ql ws wd

Elpy
2 LP mode display qj

disk
3 DISC (disk number) display

truck
Four TRACK (song number) display

Minit
Five MIN (minute) display

Second
6 SEC (seconds) display

Remote control light receiving part
7

list
8 LIST (disc name display) button qk

9 u (MD play / pause) button qh

repeat
0 REP (repeat performance) display wa


shuffle
qa SHUF (shuffle performance) display wa

off
qs OFF button qh qj

For cars without an ACC position

Press the OFF button to turn off the power. Leaving the car with the display on may cause the battery to run down.

Card remote control (RM-X86RF)

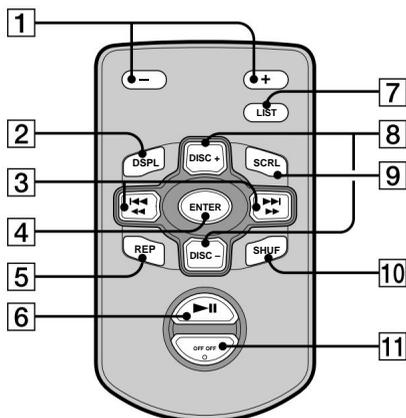

1 +/- button qk ws wd

display

2 DSPL (display switching) button w;

AMS Manual

3 AMS / MANU / .m/> M (cue / fast forward / fast rewind) button ql

enter

Four ENTER (Enter / Frequency setting / Output

level setting) button qk ws wd

repeat

Five REP (repeat performance) button wa

6 u (MD play / pause) button qh

7 LIST (disc name display) button qk

list

disk

8 DISC +/- (disc switching) button

qk

scroll

9 SCRL button w;

shuffle

0 SHUF (shuffle performance) button wa

off

qa OFF button qh qj

please note

It is possible to operate this unit with the remote control from the state where the power is off (the state where the display is off). not. Press the u button on the display to turn it on.


A few words

Please see "Precautions for Use" (page 9) for how to replace the lithium battery.

Listen to MD

1 Adjust the car audio FM tuner to the frequency set by this unit.

The initial value is 88.3MHz.

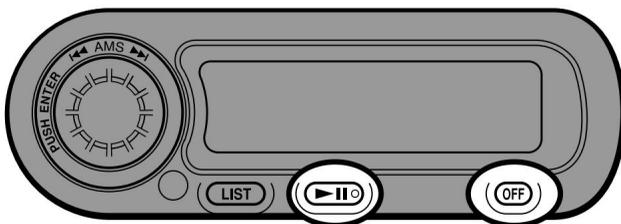

2 Press the u button to start playback

Play / Pause
(u button)



Press during playback to pause.

power off
off
(OFF button)

About volume / sound quality

Adjust on the car audio side.

Notes •

During MD playback, you cannot listen to the broadcast even if the tuner side is adjusted to the frequency of the broadcasting station.

- When MD playback is stopped, the speaker will switch to There is a noise like that. Please turn down the volume of the car audio before stopping the playback.

- The u button does not work while the transmission frequency and output level are set .

Note

You cannot operate the unit with the remote control when the power is off (the display is off). Press the u button on the display to turn it on.

Stop playback (turn off the power)

Press the OFF button.

When listening to the radio

Press the OFF button and then listen to the radio please.

When the power of this unit is turned on, noise will be generated.

You can't hear Geo.

MDLP About MDLP

The new pressure of MD that adopted "ATRAC3", which has about twice the compression efficiency of the conventional MD audio compression method "ATRAC", as the audio data compression codec. It is a reduced format.

When using an existing 80-minute disc, long-time recording / playback of up to 160 minutes in LP2 mode and up to 320 minutes in LP4 mode is possible.

When you insert a disc recorded on an MDLP-compatible deck, the unit automatically reads the LP mode and displays the mode on the display.

increase.


LP2: During LP2 stereo playback

LP4: During LP4 stereo playback



Continue to the next page

Listen to MD (continued)

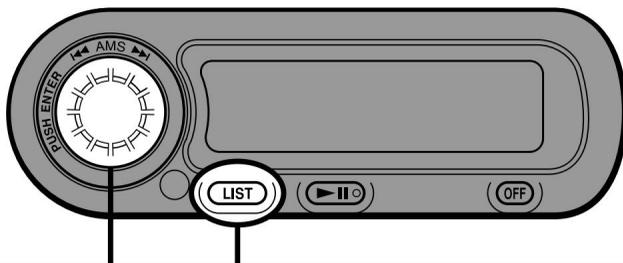

Select a disc (LIST ^{list} button)



1 Press the LIST button.

Flashes the name of the disc being played.



2 Turn the dial to select the disc you want to listen to.



3 Press the dial to confirm.

Playback will start.

please note

The following display may appear on the disk name list screen.

- "NO DISC": No disc is inserted.
- "*****": The name of the disk is not recorded.
- "NOT READ": The information on the disk has not been read.

To **operate with the card remote controller**,

you can perform the same operation by pressing the following buttons.



1 Press the LIST button.



2 Press the +/- button to select the disc you want to listen to.



3 Press the ENTER button to confirm.

Notes • If

you do not operate for 5 seconds or more while the list is displayed, the normal screen will reappear. • The LIST button does not work while the transmission frequency and output level are set.


A few words

To cancel the disc selection, press the LIST button before step 3.




You can also select a disc by pressing the DISC +/- button.

Switch to the next disc or the previous disc one by one.

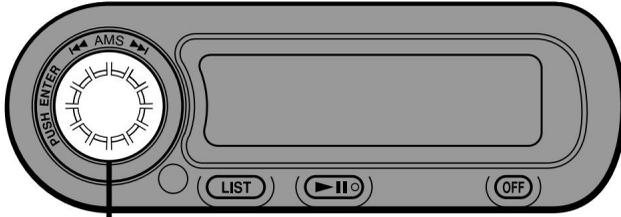

Cue the song (AMS^{AMS} control)

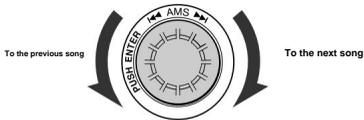

Keep turning the dial and release it at the song you want to hear.

The last song is before the first song, and the first song is after the last song.

To operate with the card remote control

ASM / Manual

You can also start the song by pressing the AMS / MANU.m /> M button.



Find the place you want to hear

(only the operation of the card remote control)

ASM / Manual

Press and hold the AMS / MANU.m /> M button and release it where you want to hear it.



A few words •

The fast-forward / fast-rewind interval when playing a long-recorded MD is as follows.

LP2: Approximately 5


seconds interval LP4:

- "  Approximately 10 seconds interval "" is displayed at the beginning or end of the disk. You cannot proceed with fast forward / rewind any further.

You can us

Continue to the next page

Listen to MD (continued)

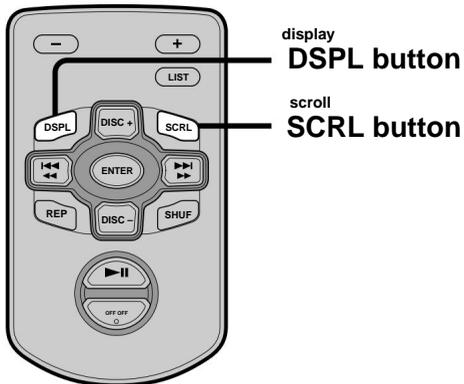

How to read the display

(Only operation of card remote control)

Press the DSPL button to switch the display.



t Playback time t Disc name * t Song name *

* If the name is not recorded on the MD, "NO NAME" is displayed and the playback elapsed time display is immediately restored.
increase.


Long names scroll automatically.

The names recorded on the MD are alphabets (lowercase letters are converted to uppercase letters), numbers, and symbols.

Can only be displayed.

If you want to see the long disc name or song name again, press the SCRL button during playback.



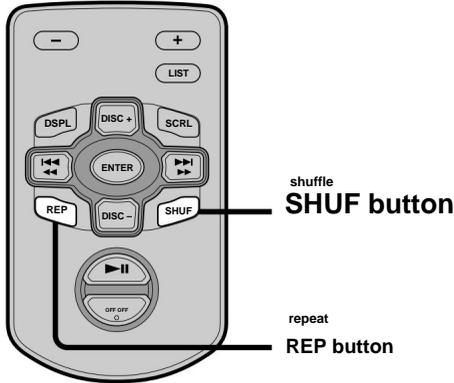

You can us

Listen repeatedly (repeat performance) (REP button)

(Only operation of card remote control)

Press the REP button during playback to switch the display.



REP 🎵 (Track repeat): The song being played is played repeatedly.

REP 🔄 (Disc repeat): Plays the current disc repeatedly.

If you set REP OFF, it will return to normal playback from there.

Listen in different song order (shuffle performance) (SHUF button) (card remote control operation only)

Press the SHUF button during playback to switch the display.




SHUF 🔄 (Disc shuffle): Play all songs on the playing disc once in no particular order.
do.

SHUF 🔄 (Changer shuffle): Play all songs in the changer in no particular order.

If you turn SHUF OFF, it will return to normal playback from there.

Set the transmission frequency

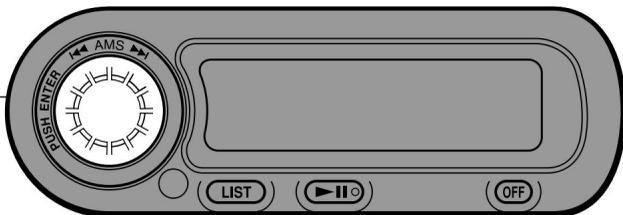

On this unit, listen to MD with an FM tuner. Therefore, if there is an FM broadcast with the same frequency as the frequency set on this unit (transmitted from this unit to the FM tuner), noise may occur during MD playback. In that case, change the transmission frequency of this unit. The initial value is 88.3MHz.



1 During MD playback, dial until the frequency is displayed.

Press for 2 seconds or longer.



2 Turn the dial to select the frequency.

Turn to the right to switch frequencies as follows:

88.3 MHz **t** 88.5 MHz **t** 88.7 MHz **t** 88.9 MHz **t** 89.1 MHz **t** 89.3 MHz **t** 89.5 MHz **t** 89.7 MHz **t** 89.9 MHz **t** 88.3 MHz

Turn it counterclockwise to display in reverse order.



3 Finally, press the dial for 2 seconds

or longer. 4 Match the reception frequency of the car audio FM tuner

Let me.

To operate with the card remote control

You can perform the same operation by pressing the following buttons.



1 During MD playback, press the ENTER button for 2 seconds or more until the frequency is displayed.

Press up.



2 Press the +/- button repeatedly to select the frequency.



3 Finally, press the ENTER button for 2 seconds or longer.

4 Adjust the reception frequency of the FM tuner of the car audio.


Notes •

The u button and LIST button do not work while the transmission frequency is set. •

When you change the transmission frequency of this unit, be sure to change the frequency registered (preset) in the FM tuner. please.

- You cannot operate the unit with the remote control from the power off state (the display is off). Press the u button on the display to turn it on.

Set the output level

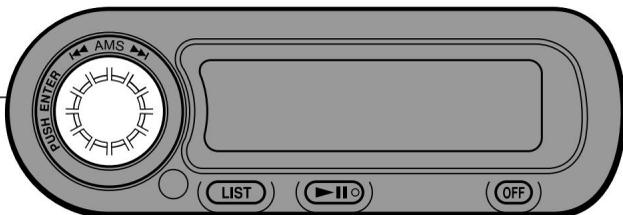

You can set the audio output level of this unit to 3 levels according to the input level of the FM tuner of the car audio .

Normally, the default value (LEVEL2) is used, but switch it if necessary.



1 Press the dial for 2 seconds or longer during MD playback.



2 Shortly press the dial again.



3 Turn the dial to select the output level.

LEVEL1 y LEVEL2 y LEVEL3



4 Finally, press the dial for 2 seconds or longer.

To operate with the card remote control

You can perform the same operation by pressing the following buttons.



1 Press the ENTER button for 2 seconds or longer during MD playback.



2 Shortly press the ENTER button again.



3 Press the +/- button to select the output level.



4 Finally, press the ENTER button for 2 seconds or longer.

Notes

- The u button and LIST button do not work while the output level is set. •

When the output level is set to 3, the sound may be distorted or noise may occur depending on the MD you are listening to . In that case, lower the audio output level of this unit, then turn up the volume of the car audio and listen at your favorite volume.

Is it a malfunction?

If the following actions do not work, the connection may be defective or defective. Please contact the technical information center, the store where you purchased the product, or a Sony service center near you.

Symptoms	Cause / action
The operation buttons do not move.	<ul style="list-style-type: none"> The built-in microcomputer is malfunctioning. <ul style="list-style-type: none"> † Press the reset button on the hideaway unit. The connection cords are not firmly inserted.
The operation buttons on the card remote control do not work	<ul style="list-style-type: none"> The battery of the card remote control is exhausted. The card remote control and the display are too far apart.
The sound jumps. The sound is interrupted.	<ul style="list-style-type: none"> The disc is damaged.
The sound cracks.	<ul style="list-style-type: none"> † Play another disc.

MD error display

If the MD changer malfunctions, the error display will flash for about 5 seconds.

error indication	Cause	treatment
NO DISC	There is no disc in the changer <small>SEARCH.</small>	Insert the disc.
ERROR	MD does not play for some reason.	Replace with another MD.
RESET	The changer works for some reason not.	Press the reset button on the hideaway unit.
BRANK	Nothing is recorded on the MD.	Replace with another MD.
NO DISCS	What is the disc in the changer I can't play everything because of the cause.	Replace with another MD.

Warranty and after-sales service

Warranty

- This product comes with a warranty card, so please pick it up at the store of purchase.
- Fill in the required items and check the contents
In addition, please save it carefully.
- The warranty period is one year from the date of purchase.

After service

If you are not feeling well, check first

Please read this manual again to find out.
Please.

If you still feel sick, go to service

Technical Information Center, Oh
Sony service near you at the store where you purchased the product or in the attached "Sony Consultation Window Information"
Please contact the counter.

Repairs during the warranty period

It was repaired based on the contents of the warranty
I will. Please see the warranty for details.

Repairs after the warranty period has expired

If the function can be maintained by repair, we will repair it
for a fee if requested.

About the holding period of parts

At our company, performance parts for car audio repair
We have (parts necessary to maintain the function of the product) for at least 6 years after the production is discontinued . This parts holding period is the repairable period.
I will do it. After the holding period has passed
However, it may be possible to repair depending on the location of the failure.
You can buy it at the store where you purchased it or at the service counter.
Please contact us.

About replacement of parts

This product may recycle and reuse parts that were replaced during repairs. At that time, the replaced parts will be collected.

Attached

Main Specifications

MD changer (MDX-66XLPRF)

Model	Minidisc digital Audio system
Frequency characteristic	10Hz-20,000Hz
Wow and flutter	Below the measurement limit
SN ratio	95dB or more
Output terminal	Bus control output terminal (8 pins) Analog audio output terminal (RCA pin)
Current consumption (including hideaway unit)	700mA (Maximum value when playing discs) 700mA (Maximum value during mechanical operation)
Operating temperature range	-10 °C / + 55 °C
Body dimensions	176 x 83.5 x 142 mm (Width / Height / Depth)
mass	About 1.1 Kg

Hideaway unit

Frequency used	88.3 MHz / 88.5 MHz / 88.7 MHz / 88.9 MHz / 89.1 MHz / 89.3 MHz / 89.5 MHz / 89.7 MHz / 89.9 MHz (switchable)
Size	Approximately 104 x 33 x 88 mm (Width / Height / Depth)
mass	About 250 g

Display (RM-X85RF)

Dimensions approx.	127.5 x 41.5 x 24 mm (Width / Height / Depth)
mass	About 145 g

Card remote control (RM-X86RF)

Size	Approximately 52 x 8.5 x 90 mm (Width / Height / Depth)
Mass	Approximately 30 g (without batteries)
battery	Button type lithium battery (CR2025)

others

power supply	DC12V car battery (Minus earth)
accessories	Installation / connection parts (set) Instruction manual (set) Information on Sony consultation desk (1) Warranty (1)
Optional item	Antenna conversion code RC-50, RC-185 (European car for) RC-150GM, RC-160GM (For American cars) XA-82 (Nissan Diversi) For cars with tees) Bus / RCA pin extension cord RC-87 (2m)

The specifications and appearance of this machine are subject to change without notice for improvement.

Please note that it may happen.

This machine is "Dolby Laboratories in the United States and outside.
It is a licensed product based on a national patent.

please note

The separately sold source selector cannot be connected to this unit.

Hmm.

index

A line

MD 16
MDLP 17
Error display 24
Sound quality 16
Volume 16

Ka line

Card remote control 9, 11, 15
Cue to songs 19

Sa line

Shuffle 21 Output
level setting 23
Transmission frequency switching 22

Line

Select a disc 18 Display
14

Nah, ha line

Display switching 20

Well, hey, wa line

Reset 10
Repeat 21

Attached

Guidance

Sony has set up a "Technical Information Center" as a customer technical consultation desk. If you have any questions, technical questions, or if you suspect a malfunction, please contact the following.

Technical Information Center Phone: 048-794-5194

Reception hours: Mon-Fri 9: 00-18: 00

(excluding holidays, year-end and New Year holidays, and our holidays)

Please let us know the following when you contact us. •

Model name • Failure status: As detailed as possible •

Date of purchase

ソニー株式会社 〒141-0001 東京都品川区北品川 6-7-35

お問い合わせはおお客様相談センターへ

● ナビダイヤル……………  0570-00-3311

(全国どこからでも市内通話料金でご利用いただけます)

● 携帯電話・PHSでのご利用は… 03-5448-3311

● Fax ……………… 0466-31-2595

受付時間：

月～金

9:00～

20:00、

土・日・祝日

9:00～

17:00

<http://www.sony.co.jp/>