

MDX-U1/U1RDS

SONY SERVICE MANUAL

US Model
Canadian Model
E Model
MDX-U1
AEP Model
MDX-U1RDS

CORRECTION-1

Correct your service manual supplement-1 as shown below.

Page	INCORRECT			CORRECT	
	No.	Part No.	Description	Part No.	Description
			< SWITCH >		< SWITCH >
	SW1	1-672-037-41	SWITCH (FM)	1-692-037-31	SWITCH (FM)
	SW2	1-672-037-41	SWITCH (AM)	1-692-037-31	SWITCH (AM)
	SW3	1-672-037-41	SWITCH (▲)	1-692-037-31	SWITCH (▲)
	SW4	1-672-037-41	SWITCH (+)	1-692-037-31	SWITCH (+)
	SW5	1-672-037-41	SWITCH (SEL)	1-692-037-31	SWITCH (SEL)
	SW6	1-672-037-41	SWITCH (AMS ►►/SEEK +)	1-692-037-31	SWITCH (AMS ►►/SEEK +)
	SW7	1-672-037-41	SWITCH (AMS ◄◄/SEEK -)	1-692-037-31	SWITCH (AMS ◄◄/SEEK -)
	SW8	1-672-037-41	SWITCH (DISC ►►/SEEK +)	1-692-037-31	SWITCH (DISC ►►/SEEK +)
	SW9	1-672-037-41	SWITCH (DISC ◄◄/SEEK +)	1-692-037-31	SWITCH (DISC ◄◄/SEEK +)
	SW10	1-672-037-41	SWITCH (MUTE)	1-692-037-31	SWITCH (MUTE)
16	SW11	1-672-037-41	SWITCH (FILE)	1-692-037-31	SWITCH (FILE)
	SW12	1-672-037-41	SWITCH (BTM/M, SCAN)	1-692-037-31	SWITCH (BTM/M, SCAN)
	SW13	1-672-037-41	SWITCH (SCRL/SENS)	1-692-037-31	SWITCH (SCRL/SENS)
	SW16	1-672-037-41	SWITCH (CD)	1-692-037-31	SWITCH (CD)
	SW17	1-672-037-41	SWITCH (MD)	1-692-037-31	SWITCH (MD)
	SW18	1-672-037-41	SWITCH (OFF)	1-692-037-31	SWITCH (OFF)
	SW19	1-672-037-41	SWITCH (-)	1-692-037-31	SWITCH (-)
	SW20	1-672-037-41	SWITCH (DSPL)	1-692-037-31	SWITCH (DSPL)
	SW21	1-672-037-41	SWITCH (1/INTRO)	1-692-037-31	SWITCH (1/INTRO)
	SW22	1-672-037-41	SWITCH (2/REPEAT)	1-692-037-31	SWITCH (2/REPEAT)
	SW23	1-672-037-41	SWITCH (3/SHUF)	1-692-037-31	SWITCH (3/SHUF)
	SW24	1-672-037-41	SWITCH (4/BANK)	1-692-037-31	SWITCH (4/BANK)
	SW25	1-672-037-41	SWITCH (5)	1-692-037-31	SWITCH (5)
	SW26	1-672-037-41	SWITCH (6)	1-692-037-31	SWITCH (6)



9-957-636-91

Sony Corporation
Mobile Electronics Group

English
94A0583-1D
Printed in Japan
© 1994. 1

Published by Audio Sector Quality Assurance Dept.