

Sony Model	Wireless Remote	Supplied (Y/N)	Illumin (Y/N)	Substitutes	Control Language	Rotary Commander	Supplied (Y/N)
CDX-A40RF	RM-X12	Yes	Yes	None	A	None	
CDX-A55RF	RM-X4	Yes	No	None	A	None	
CDX-C410	RM-X41	No	No	RM-X40	B	RM-X2S	No
CDX-C460	RM-X41	No	No	RM-X40	B	RM-X2S	No
CDX-C480	RM-X47	No	No	RM-X40/41	B	RM-X2S/4S	No
CDX-C490	RM-X40	No	No	RM-X41	B	RM-X2S	Yes
CDX-C5000X	RM-X91	No	No	None	B	RM-X4S	No
CDX-C510	RM-X41	No	No	RM-X40	B	RM-X2S	No
CDX-C5050X	RM-X91	Yes	No	None	B	RM-X4S	No
CDX-C560	RM-X41	No	No	RM-X40	B	RM-X2S	No
CDX-C580	RM-X47	No	No	RM-X40/41	B	RM-X2S/4S	No
CDX-C590	RM-X40	No	No	RM-X41	B	RM-X2S	Yes
CDX-C610	RM-X41	No	No	RM-X40	B	RM-X2S	No
CDX-C660	RM-X41	No	No	RM-X40	B	RM-X2S	Yes
CDX-C680	RM-X47	No	No	RM-X40/41	B	RM-X2S/4S	Yes
CDX-C710	RM-X41	No	No	RM-X40	B	RM-X2S	Yes
CDX-C760	RM-X41	No	No	RM-X40	B	RM-X2S	Yes
CDX-C780	RM-X47	No	No	RM-X40/41	B	RM-X2S/4S	No
CDX-C810DSP	RM-X41	No	No	RM-X40	B	RM-X2S	Yes
CDX-C860	RM-X41	No	No	RM-X40	B	RM-X2S	Yes
CDX-C880	RM-X47	No	No	RM-X40/41	B	RM-X4S	Yes
CDX-C910	RM-X41	No	No	RM-X40	B	RM-X2S	Yes
CDX-C90	RM-X9**	Yes	No	None	B	RM-X90***	Yes
CDX-C4750	None					RM-X4S	No
CDX-C5750	None					RM-X4S	No
CDX-C5850	None					RM-X4S	No
CDX-C6750	RM-X47	No	No	RM-X40/41	B	RM-X4S	No
CDX-C6850	RM-X47	No	No	RM-X40/41	B	RM-X4S	No
CDX-C7000X	RM-X91	Yes	No	None	B	RM-X4S	No
CDX-C7050X	RM-X91	Yes	No	None	B	RM-X4S	No
CDX-C7850	RM-X47	Yes	No	RM-X40/41	B	RM-X4S	Yes
CDX-C8050X	RM-X91	Yes	No	None	B	RM-X4S	No
CDX-C8850	RM-X47	Yes	No	RM-X40/41	B	RM-X4V	Yes
CDX-M600	RM-X92	Yes	No	RM-X91	B	RM-X4S	No
CDX-M650	RM-X94	Yes	No	RM-X91	B	RM-X4S	No
CDX-M750	RM-X92	Yes	No	RM-X91	B	RM-X4S	No
CDX-T60RF	RM-X43	Yes	No	RM-X5	A	RM-X3S	No
CDX-U300RF	RM-X5	Yes	No	RM-X6/43	A	None	
CDX-U303RF	RM-X5	Yes	No	RM-X6/43	A	RM-X32	No
CDX-U6260	RM-X35	No	No	RM-X25	B	None	
CDX-U8000	RM-X25	No	Yes	RM-X27/35	B	None	
CDX-52RF	RM-X58	Yes	No	RM-X43	A	None	
CDX-65RF	RM-X5	Yes	No	RM-X6/43	A	RM-X32	No
CDX-71RF	RM-X43	Yes	No	RM-X5/6	A	RM-X3S	No
CDX-505RF	RM-X58	Yes	No	RM-X43	A	None	
CDX-525RF	RM-X58	Yes	No	RM-X43	A	None	
CDX-600DSP	RM-X40	No	No	RM-X41	B	RM-X1S	Yes
CDX-900	RM-X40	No	No	RM-X41	B	RM-X33	Yes
CDX-4000X	None					RM-X4S	No
CDX-4160	None					RM-X2S	No
CDX-4180	None					RM-X2S/4S	No
CDX-5090	None					RM-X2S	No
CDX-5100	RM-X41	No	No	RM-X40	B	RM-X2S	No
CDX-5270	RM-X40	No	No	RM-X36	B	RM-X1S	No
CDX-5290	None					RM-X2S	No

Sony Model	Wireless Remote	Supplied (Y/N)	Illumin (Y/N)	Substitutes	Control Language	Rotary Commander	Supplied (Y/N)
CDX-530RF	RM-X89	Yes	No	None	A	None	
CDX-5460	RM-X35	No	No	RM-X25	B	None	
CDX-5470	RM-X40	No	No	RM-X36	B	RM-X1S	Yes
CDX-5490	None					RM-X2S	No
EXCD-90	None					RM-X2S	No
EXR-C205	None					RM-X2S	No
EXR-21	None					RM-X2S	No
EXR-105	None					RM-X2S	No
EXR-400	None					RM-X2S	No
EXR-500	None					RM-X2S	No
MDX-C150	None					RM-X2S	No
MDX-C6500X	RM-X91	No	No	None	B	RM-X4S	No
MDX-C760	None					RM-X2S	Yes
MDX-C7900	None					RM-X4S	Yes
MDX-C7970	RM-X47	No	No	RM-X40/41	B	RM-X4S	Yes
MDX-C800REC	RM-X91	No	No	None	B	RM-X4S	Yes
MDX-C8500X	RM-X91	Yes	No	None	B	RM-X4S	No
MDX-C8900	RM-X47	No	No	RM-X40/41	B	RM-X4S	Yes
MDX-C8970	RM-X47	Yes	No	RM-X40/41	B	RM-X4V	Yes
MDX-U1	RM-X27	Yes	Yes	None	B	None	
MDX-100	RM-X40	No	No	RM-X27	B	None	
MDX-400	RM-X40	No	No	RM-X27	B	RM-X38	Yes
RM-X12A	RM-X12	Yes	Yes	None	A	None	
RM-X14	RM-X6	Yes	No	None	A	None	
RM-X45RF	RM-X45	Yes	No	None	A	None	
RM-X59RF	RM-X43	Yes	No	RM-X5/X6	A	RM-X3S	No
RM-X69RF	RM-X43	Yes	No	RM-X5/X6	A	RM-X3S	No
SVX-20	RM-X20	Yes	No	None	D	None	
XES-P1	RM-X16/17	Yes	Yes	None	B	RM-X11	Yes
XK-R100	RM-X40	No	No	RM-X41	B	RM-X1S	No
XMC-U150	RM-X31	Yes	No	None	A	None	
XR-C190	None					RM-X1S	No
XR-C210	None					RM-X1S	No
XR-C2300X	None					RM-X4S	No
XR-C300	None					RM-X2S	No
XR-C350	None					RM-X2S	No
XR-C400	None					RM-X2S	No
XR-C410	None					RM-X1S	No
XR-C450	RM-X41	No	No	RM-X40	B	RM-X2S	No
XR-C500	RM-X41	No	No	RM-X40	B	RM-X2S	Yes
XR-C520	None					RM-X1S	No
XR-C550	RM-X41	No	No	RM-X40	B	RM-X2S	No
XR-C610	RM-X40	No	No	RM-X41	B	RM-X2S	No
XR-C620	RM-X40	No	No	RM-X41	B	RM-X2S	Yes
XR-C700	RM-X41	No	No	RM-X40	B	RM-X2S	Yes
XR-C720	RM-X40	Yes	No	RM-X41	B	RM-X2S	Yes
XR-C7350X	RM-X91	No	No	None	B	RM-X4S	No
XR-C750	RM-X41	No	No	RM-X40	B	RM-X2S	Yes
XR-C900	RM-X42	Yes	No	RM-X41	B	RM-X2S	Yes
XR-C5100	None					RM-X2S/4S	No
XR-C5120	None					RM-X4S	No
XR-C5300X	RM-X91	No	No	None	B	RM-X4S	No
XR-C6100	RM-X47	No	No	RM-X40/41	B	RM-X2S/4S	No
XR-C6120	RM-X47	No	No	RM-X40/41	B	RM-X4S	No

Sony Model	Wireless Remote	Supplied (Y/N)	Illumin (Y/N)	Substitutes	Control Language	Rotary Commander	Supplied (Y/N)
XR-C7200	RM-X47	No	No	RM-X40/41	B	RM-X2S/4S	No
XR-C7220	RM-X47	No	No	RM-X40/41	B	RM-X4S	No
XR-C8200	RM-X47	No	No	RM-X40/41	B	RM-X4S	Yes
XR-C8220	RM-X47	No	No	RM-X40/41	B	RM-X4S	Yes
XR-C9100	RM-X47	No	No	RM-X40/41	B	RM-X4S	Yes
XR-M550	RM-X94	Yes	No	None	B	RM-X4S	No
XR-U500	RM-X36	No	No	RM-X40	B	None	
XR-U550/660/ 770	RM-X3	No	No	RM-X30	B	None	
XR-U700	RM-X36	Yes	No	RM-X40	B	None	
XR-U800	RM-X36	No	No	RM-X40	B	RM-X33	Yes
XR-U880	RM-X30	Yes	Yes	RM-X3	B	None	
XR-340	RM-X40	No	No	RM-X36*	B	RM-X1S	No
XR-430	RM-X40	No	No	RM-X36*	B	RM-X1S	Yes
XR-1750	None					RM-X2S/4S	No
XR-3750	None					RM-X2S	No
XR-4800	None					RM-X2S/4S	No
XR-6450	None					RM-X2S	No
XR-6700	None					RM-X2S	No
XR-7500	RM-X7	Yes	No	RM-X9	B	None	
XR-7600	RM-X9	Yes	No	RM-X7	B	None	
XT-V8A	RM-X8	Yes	No	None	C	None	

* Remote will not select a Minidisc changer such as a MDX-60/61/62/65.

** Remote is NOT the same as remote for the XR-7600 although model number is identical!

*** This wired remote will ONLY work with the CDX-C90