 


## Selecting the remote control master

At the top of the remote control unit, there is a CD/MD switch used to select the deck to be controlled by the shared keys on the upper portion of the remote control unit.


The selected deck is called "remote control master".

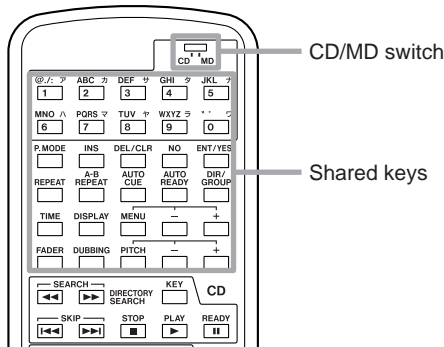

## Selecting the display master

You can select the display master using the CD or MD key.

The display represents the information of the display master deck. The CD or MD indicator lights up to show the selection.

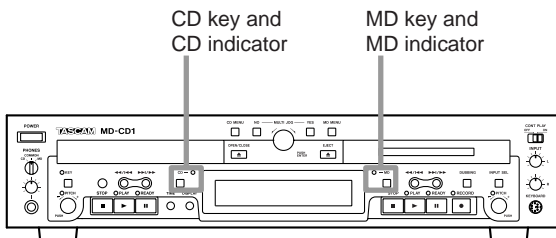

## Dubbing from CD to MD

The great advantage of the MD-CD1 is that you can make dubbing from CD to MD easily.

Here's how to make dubbing.



### Preparations

Load the CD to be used as the dubbing source into the CD deck, then insert a recordable MiniDisc into the MD deck.

### To dub the entire CD

While the CD deck is stopped, press the **DUBBING** key on either the front panel or the remote control.

Dubbing starts.

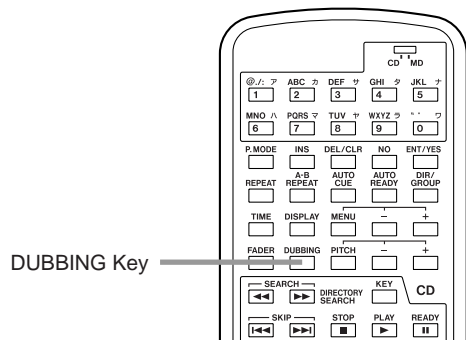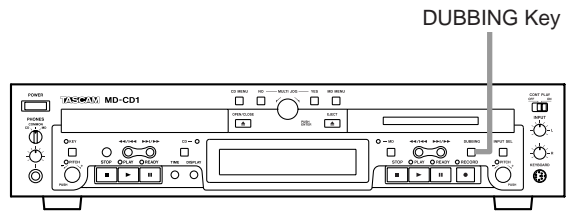

### NOTE

By default, recording is performed in the standard stereo recording mode while dubbing speed is 4x speed. You can change the recording mode or dubbing speed via the menu mode.


## To dub a selected track on the CD

- 1 Select the desired track by using the skip keys or numeric keys, and start playback by pressing the PLAY key or enter the playback standby by pressing the READY key.

### NOTE

The selected CD track number is shown on the top left of the display while the display master is set to CD.

Track number

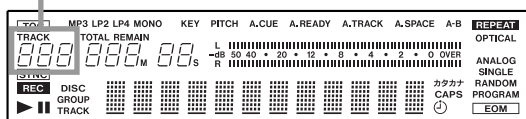

- 2 Press the DUBBING key on either the front panel or the remote control.

When the track is finished dubbing, both decks will stop.

## Recording an external source


The MD-CD1 can not only dub from CD to MD, it also allows MD recording from external sound sources.

### Preparations

- Connect an external sound source to the appropriate connector(s) (ANALOG INPUT or DIGITAL (OPTICAL) INPUT) on the rear panel of the unit).
- Insert a recordable MiniDisc to the deck.
- Make sure that the deck is in stop mode.


### Input source selection

Use the INPUT SEL key on the front panel or the remote control to select the input source between ANALOG and OPTICAL.

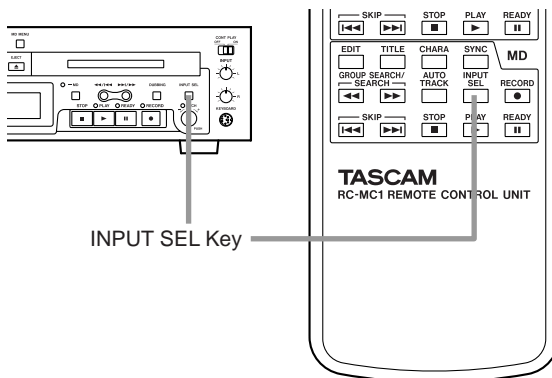

The current selection is shown on the right of the display.

Input source

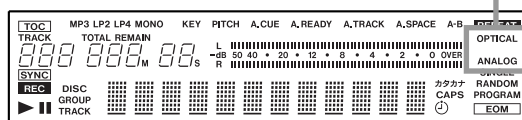

### Input monitoring

Press the RECORD key on either the front panel or the remote control.

The MD deck will enter recording standby mode, the READY and RECORD indicators will light up.

The MD input signal can be monitored through headphones or a connected audio system.

### Monitoring

By connecting your monitor system (amplifier/speakers) to the COMMON OUTPUT connectors, you can monitor either of the CD and MD decks.

### NOTE

If you wish to monitor the CD and MD decks independently, use the CD OUTPUT and MD OUTPUT connectors.


---

## Recording level adjustment

If necessary, adjust the recording level while monitoring the input and viewing the meters on the display.

Use the "REC VOLUME?" option on the VOL FUNC sub-menu of the MD menu to adjust the level.

If ANALOG is selected as the input source, you may also use the front panel INPUT controls (L and R) to set the level independently for each channel.

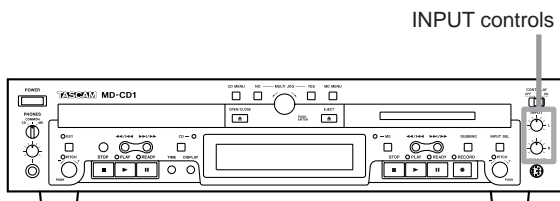

---

## Starting recording

In the recording standby mode, press the PLAY key, and recording will start.

To stop recording, press the STOP key.

After pressing the STOP key, "UTOC Writing" will be shown on the display as the User Table Of Contents is written on the disc.

To pause recording, press the READY key.

---

## Advanced recording functions

### To enter a track number manually

During recording, press the RECORD key at the point where you wish to begin a new track.

### To enter track numbers automatically

Use the "AUTO TRACK" key to select "-XXdB" (a track number is added when a silent part is detected in the source) or "D-D" (track numbers are added in accordance with the digital source track numbers).

### To fade-in or fade-out recording

In recording standby mode, press the FADER key to fade-in recording.

During recording, press the FADER key to fade-out the sound.

---

## Menu

The various settings and editing operations possible with the MD-CD1 are performed through menu items shown on the display. Among the many menu setting items, some may be made directly using the keys on the remote control.

---

## Menu configuration

There are CD menu and MD menu. Each menu consists of some sub-menus as shown below. Each sub-menu has some items.

### CD menu

**CD PLAY** sub-menu for CD playback

**CD VOL FUNC** sub-menu for volume functions

**SERIAL** sub-menu for RS-232C settings

**SYSTEM** sub-menu for the unit

### MD menu

**MD PLAY** sub-menu for MD playback

**MD VOL FUNC** sub-menu for recording level

**REC** sub-menu for MD recording

**EDIT** sub-menu for MD editing functions


**TITLE** sub-menu for MD title editing functions

---

## Menu operation

Here's how to make menu setting using the front panel controls.

- 1 Press the CD MENU key or the MD MENU key to call up the desired menu.

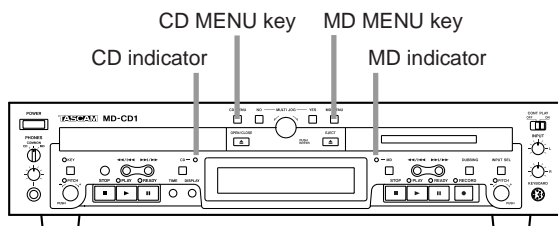


### NOTE

*In Menu mode, the CD or MD indicators flash to indicate which menu is called up.*

You can now select the desired sub-menu.

- 2 Use the **MULTI JOG** dial to select the desired sub-menu, then press the **ENTER** key or the **YES** key.

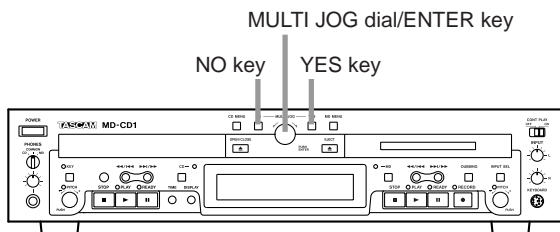

You can now select the sub-menu item.

- 3 Use the **MULTI JOG** dial to select the desired menu item, then press the **ENTER** key.

You can now make setting.

- 4 Use the **MULTI JOG** dial to select the desired option, then press the **ENTER** key.

- 5 Press the **CD MENU** or **MD MENU** key corresponding to the current Menu mode to exit Menu mode.

**NOTE**


- To go up the menu level, press the **NO** key.
- Some menu items exist for confirmation purposes only, and setting cannot be performed.

## Playback

### Playback modes

There are four different playback modes for both the CD deck and the MD deck.

You can select the desired playback mode using the **P. MODE** key.

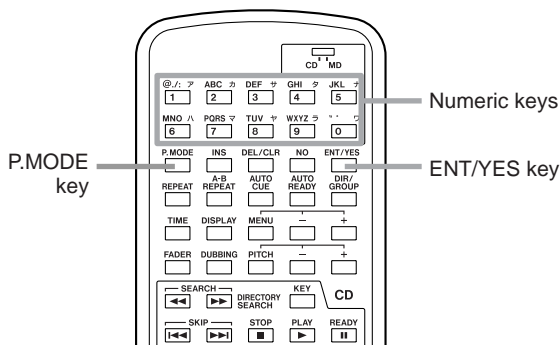

The current mode is indicated on the display.

- Normal** (continuous) mode: no indication
- Single** mode: SINGLE is lit
- Program** mode: PROGRAM red lamp is lit
- Random** mode: RANDOM red lamp is lit

**MEMO**

In the program mode, you can program tracks by selecting a track using the numeric keys and then pressing the **ENT/YES** key repeatedly.

### Continuous CD and MD playback

By setting the **CONT PLAY** switch on the front panel to "ON", when one deck finishes playback, the other deck begins playback automatically.

